

PERMALUBE GIMBAL BEARING KIT

IMPORTANT: This document guides dealers, boatbuilders and company service personnel in the proper gimbal bearing installation.


Components Contained in Kit

Qty.	Description
1	Permalube gimbal bearing
1	Grease passage plug (1/8" allen head set screw)

Gimbal Bearing Grease Passage Plug Retrofit

When changing the gimbal bearing to the permanently lubricated type, replace the grease fitting with the included grease passage plug.


1. Remove the grease fitting from the side of the transom housing.

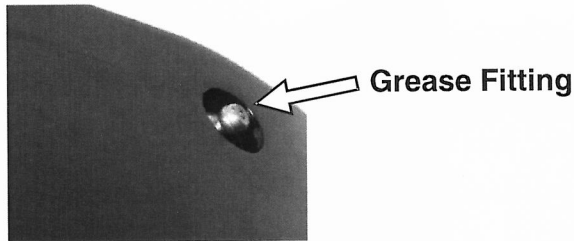

2. Apply sealant to the threads of the grease passage plug.

Description	Where Used
Perfect Seal	Grease passage plug

3. Use a 1/8" allen wrench to install the grease passage plug until fully seated.

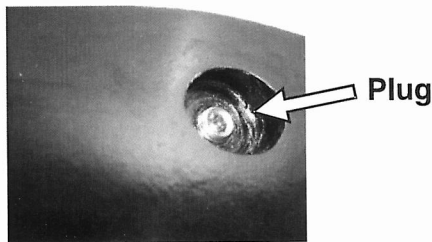

1/8" Allen (Hex) Head	AWCG1608B
	Drives 1/8" Allen (hex) heads.