


## INSTALLATION INSTRUCTIONS

Copy Part# 971717, Rev. C, 02/2014

Page 1 of 2

### SEASTAR<sup>™</sup>

# POLISHED BULKHEAD DUAL HOSE KITS

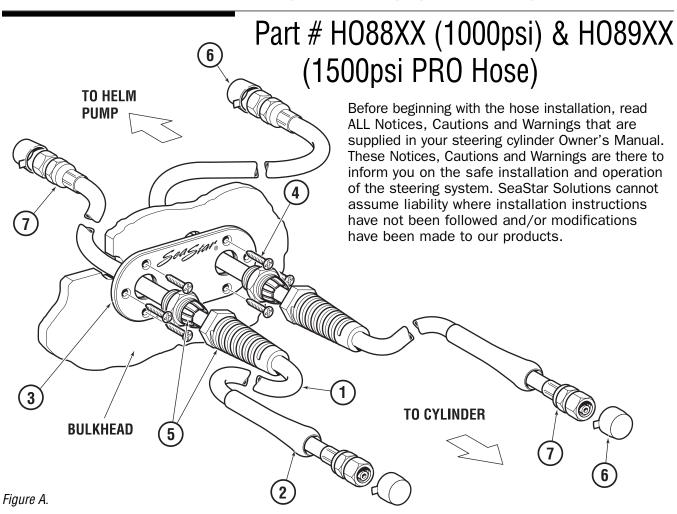

#### NOTICE

If spare parts are required an entire new length of hose will need to be ordered. There is no means to swage a new swage fitting (item 7) on to a hose in the field.

ITEM	QTY	DESCRIPTION
1	N/A	SeaStar Outboard Steering Hose Various lengths. DO NOT cut.
2	2	Bend Restrictor. Not available for purchase as a separate item
3	1	Polished Bulkhead Mounting Plate, DUAL
4	6	#10 Screws (Customer Supplied)

ITEM	QTY	DESCRIPTION
5	2	Pigtail Fitting. Not available for purchase as a separate item
6	4	Dust Cap, Red Dust Cap, Green
7	4	Swage Fitting. Not available for purchase as a separate item



## INSTALLATION INSTRUCTIONS

Copy Part# 971717, Rev. C, 02/2014

Page 2 of 2

#### **Installation Instructions**

Determine desired area where the hoses will exit the transom.
DO NOT mount below the waterline of the boat as this is NOT a fluid tight fitting.


#### **NOTICE**

Ensure that the plate will be mounted to a flat, even surface.

- Drill two, 1" holes at 3" center to center (refer to figure B below) through the bulkhead/splashwell. Clean holes after drilling to ensure they are free of any burrs that may puncture or chafe the steering hoses.
- Feed hoses (item 1) from the outside, through the bulkhead/ splashwell, inside along gunwale/PVC Tubing, under deck and to the helm pump. The bend restrictors (item 2) are to be installed onto the steering cylinder(s).

#### **A** CAUTION

DO NOT remove the protective caps from the steering hoses until connection to the helm(s) and cylinder(s) are ready to be made.

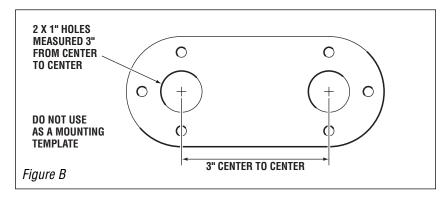

- Secure the bulkhead mounting plate (item 3) to the outside of the Splashwell using six #10 screws (item 4, customer supplied).
- Secure hydraulic hoses to the steering cylinders and slide the bend restrictor (item 2) over the swage fitting. Torque fitting (item 7) to 15 ft-lb. (20.34Nm).
- Thread the pigtail fittings (item 5) onto the bulkhead mounting plate (item 3).

#### **A** CAUTION

Ensure that there is sufficient hose to allow full engine movement in ALL Trim/Tilt and steering ranges.

• Torque pigtail fitting to 20 in-lb. (2.31 Nm).

#### **▲** WARNING

DO NOT mount below static float plane of boat. This is not a fluid tight fitting.

#### **A** WARNING

DO NOT cut SeaStar Outboard steering hose. There is no means in the field to install a swage fitting to the hose end.

#### **NOTICE**

Individual items (i.e. swage fitting, plate, hose, etc.) cannot be ordered as a single part. If replacement parts are required an entire new length of hose will need to be purchased.