

SEPAR 2000 WITH FUEL HEATING SYSTEM

SEPAR SWK-2000/10/H

FILTER

1115

SWK-2000/5/50/H

S E P A R FILTER

Willibrord Lösing 45517 Hattingen





The SEPAR 2000 filter equipped with an electric fuel heating system improves the start up of diesel engines in cold weather conditions at or below 0 °C **and** separates the water and particulate which is contained in the fuel – as described in the attached folder.

SEPAR 2000 with heater offers:

- 1 E 2 H 3 (
 - Efficient heating performance Heater controlled automatically Compact design

Improved engine start-up



SEPAR 2000 FUNCTION OF THE SEPAR 2000 WITH FUEL HEATING

Heat is transmitted to the aluminium centrifuge and vane section very efficiently, so as the fuel enters the filter it starts to become warm. The warmed fuel prevents the filter becoming clogged by paraffin that has formed due to very low temperatures. The fuel filter heating system is controlled by a thermostat which activates the heater at 5 °C, if the fuel temperature reaches 10 °C the heater is switched off as the fuel heating system is not necessary. A pilot lamp located in the switch indicates when the thermostat has activated the heating system. The system is fully protected by a fuse in the filter housing that protects the heater in the unlikely event that the heater temperature reaches 80 °C, also a fuse is fitted to the heater power supply.

The SEPAR heated fuel filter should be installed according to the instructions in the literature provided and in accordance with the connection diagrams shown on the last page.

ELECTRIC CIRCUIT

The heated models SWK 2000/5/50/H and SWK 2000/10/H are supplied with an 'on' and 'off' switch fitted with a pilot lamp that indicates when the heater is on. To activate the heater move the switch to the 'on' position, then start the engine, the heater will now be on if the fuel temperature is below 5 °C and the pilot lamp will be illuminated. The heater is powered by the engine alternator and controlled thermostatically. If the diesel engine is stopped then the heater will be switched off automatically. The heated SEPAR filter is connected to the vehicles electrical system by standard flat 'push on' connections.

APPLICATION

SEPAR 2000 filters with heater can be installed on any diesel engine with either a 12 or 24 volt electrical system. Preferred applications are trucks, buses, construction and agricultural equipment as well as stationary engine applications that are used in cold climates














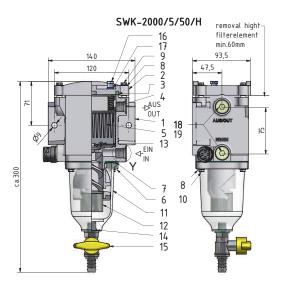




| POS. | Article-No. SWK 2000/5/50/H SWK 2000/10/H | | Pieces | Description | |
|------|--|---------|--------|------------------------------|--|
| 1 | 06 1175 | 06 1130 | 1 | Housing | |
| 2 | 06 3542 | 06 3553 | 1 | Lid | |
| 3 | 06 1367 | 06 1362 | 1 | Lid gasket | |
| 4 | 06 3296 | 06 3297 | 1 | Spring cassette | |
| 5 | 00530/50/H | 01030/H | 1 | Filter element | |
| 6 | 06 3564 | 06 3569 | 1 | Bowl retainer ring | |
| 7 | 06 1366 | 06 1361 | 1 | Bowl gasket | |
| 8 | 06 3447 | 06 3448 | 8 | Washer | |
| 9 | 06 3430 | 06 3567 | 4 | Screw (Lid) | |
| 10 | 06 3561 | 063568 | 4 | Screw (Bowl retainer ring) | |
| 11 | 06 3984 | 06 3985 | 1 | Bowl | |
| 12 | 06 1192 | 06 1282 | 1 | Heater 24 V 300 W | |
| 13 | 06 1101 | 06 1101 | 1 | Board f. temperature control | |
| 14 | 06 1360 | 06 1360 | 1 | Gasket | |
| 15 | 06 3366 | 06 3366 | 1 | Drain valve | |
| 16 | 06 3408 | 06 3408 | 1 | Bleed screw | |
| 17 | 06 3558 | 06 3558 | 1 | Gasket f. Pos. 16 | |
| 18 | 063471 | 063226 | 2 | Blind screw | |
| 19 | 06 1360 | 06 1359 | 2 | Gasket f. Pos. 18 | |
| 20 | 06 1307 | 06 1307 | 1 | Mating connector | |
| 21 | 06 1219 | 06 1219 | 1 | Relay 24 V | |
| 22 | 06 3074 | 06 3074 | 1 | Heater switch | |
| 23 | 06 1586 | 06 1586 | 1 | Fuse holder | |
| 24 | 06 1584 | 06 1584 | 1 | Fuse 20 A | |
| 25 | 06 3087 | 06 3087 | 9 | Flat plug | |

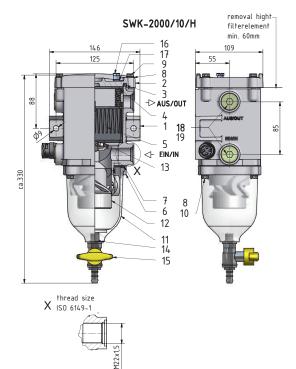


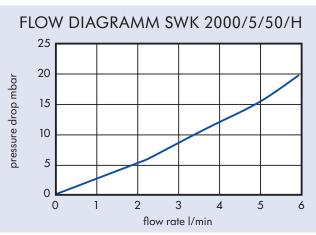

Max. flow rate: 5 l/min

Thread: M 16 x 1,5

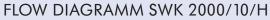

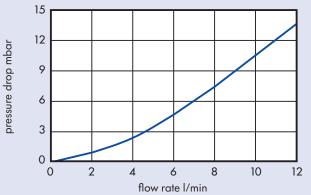


Max. flow rate: 10 l/min



SEPAR 2000 ELECTRIC INSTALLATION

Wiring diagram of the filter

Wiring diagram of the vehicle

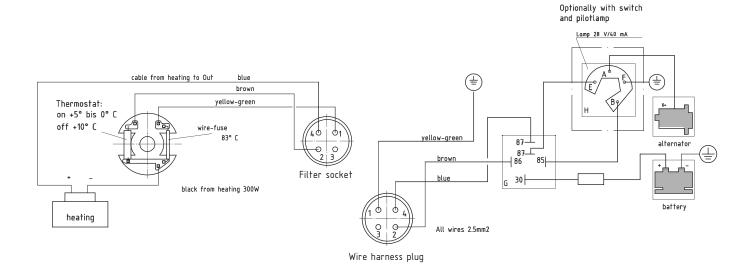

| | AVAILABLE | VERSIONS | | |
|-----------------|-----------|-------------|------------------------------|----------------|
| ТҮРЕ | | Performance | Spare Elements- Pore Size | Max. Flow Rate |
| SWK-2000/5/50/H | | 250 W/12 V | 00530/50/H – 30 μ | 5 l/min |
| SWK-2000/5/50/H | | 300 W/24 V | 00530/50/H – 30 μ | 5 l/min |
| SWK-2000/10/H | | 250 W/12 V | 01030 H – 30 μ | 10 l/min |
| SWK-2000/10/H | | 300 W/24 V | 01030 H – 30 μ | 10 l/min |
| SWK-2000/10/H | | 450 W/24 V | 01030 H – 30 μ | 10 l/min |

NOTE

All of the aforementioned types have been approved by the german Kraftfahrt-Bundesamt located in Flensburg with "Allgemeine Betriebserlaubnis" - No. 90533

For installation and maintenance please follow the recommendations in our literature.

We reserve the right to make technical changes without notification

Willibrord Lösing Filtertechnik e.K.



Postfach 86 60 09 45517 Hattingen Am Walzwerk 2 45527 Hattingen Phone +49 2324 9460-0 Fax +49 2324 40842 info@loesing-filter.de www.loesing-filter.de